



WL-5000E Wiring Index for 6 units

TERMINALS

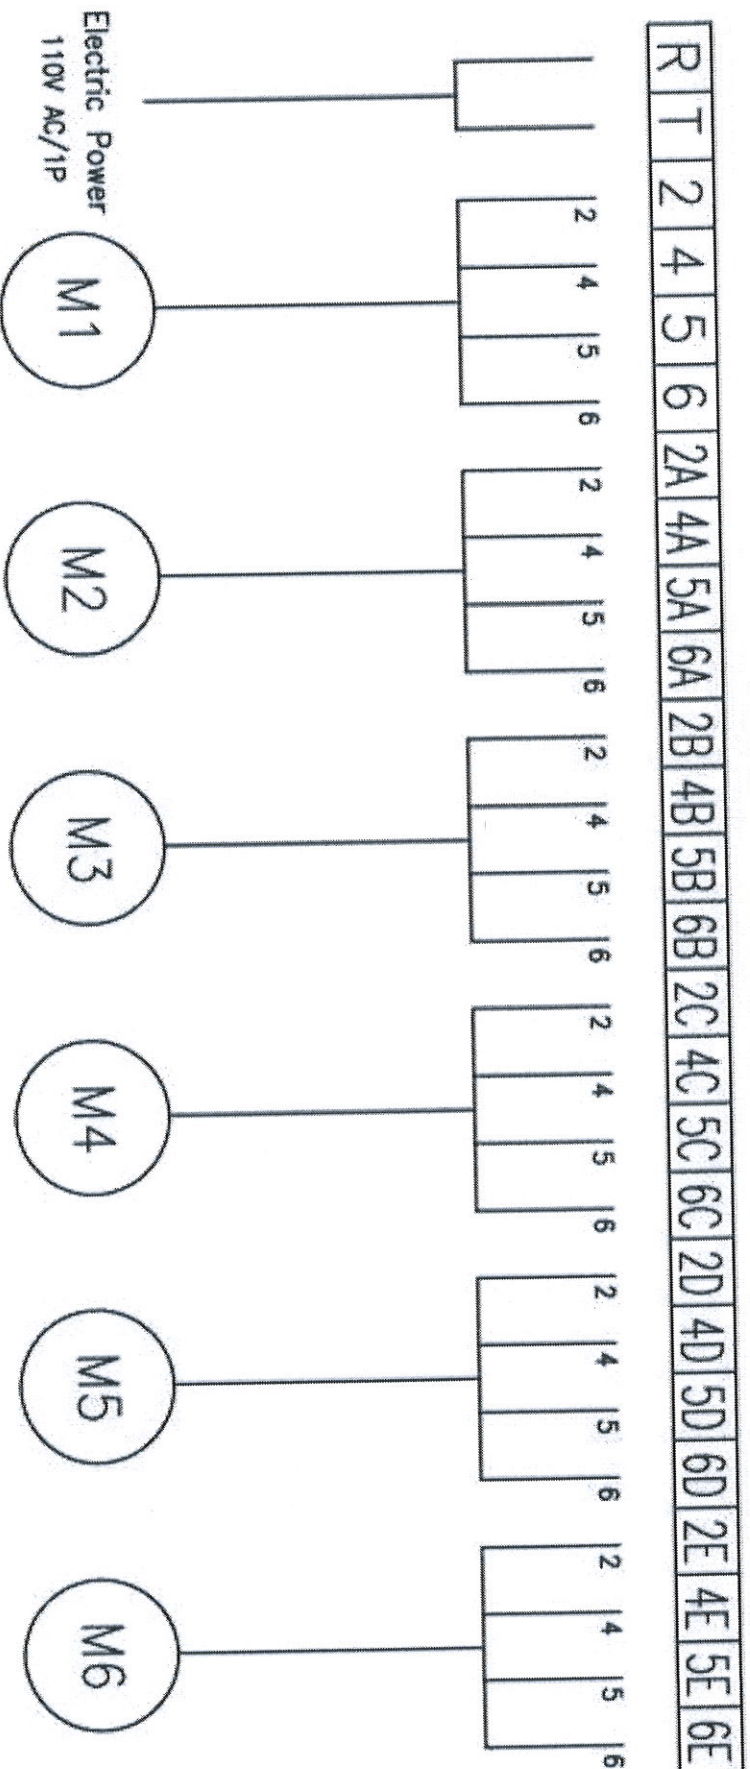

WL-5000E 6*UNITS CONTROL PANEL INDEX

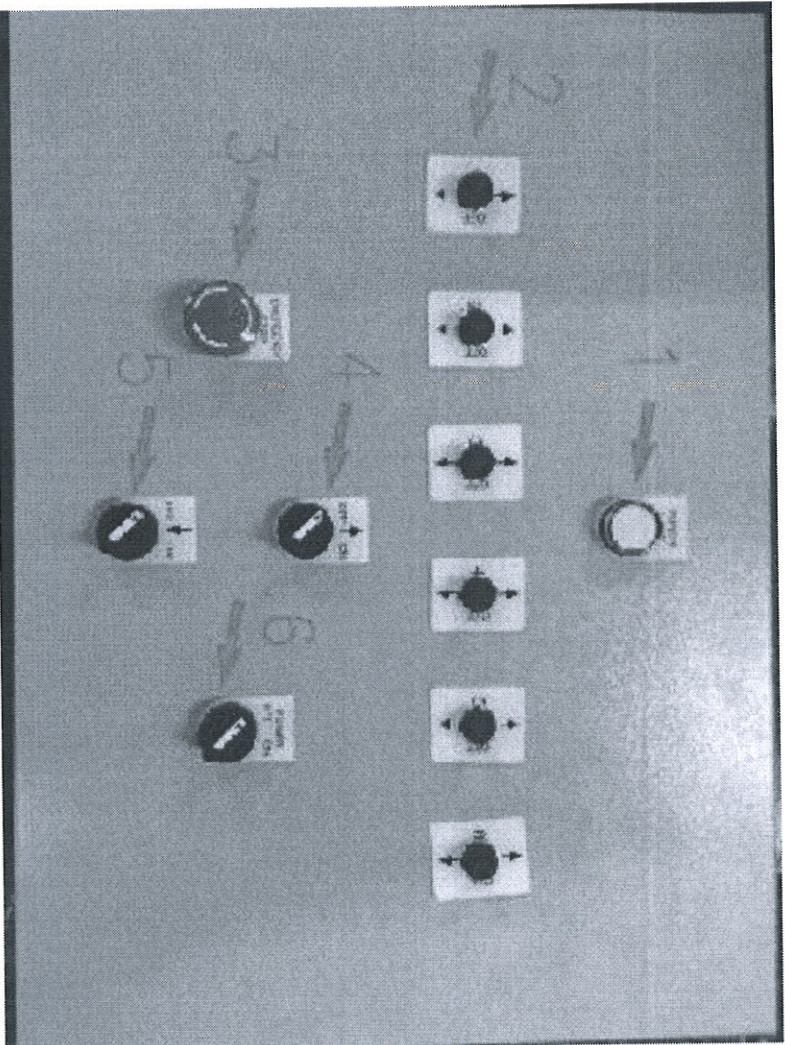

1. Power Light
2. Winch (No. 1~6) Selection Switch
(up / off / down)
3. Emergency Stop
4. Multi-UP control switch
5. Multi-DOWN control switch
6. Power Switch

Operating procedure:

- Refer wiring index and wire the WL-5000E cable to the controller respectively
- Turn on **Power Switch**
- Select operating winch and set the **Winch (No. 1~6) Selection Switch** at **up** or **down**, non-operating winch at **off**
- Turn Multi-UP control switch for **UP** operation
- Turn Multi-DOWN control switch for **DOWN** operation
- **UP & DOWN** cannot be operated at the same time