




DOSATAK PLAYLIST



DOSATAK®

# MOTOR ASSEMBLY REPAIR KIT

Cód. KRCM

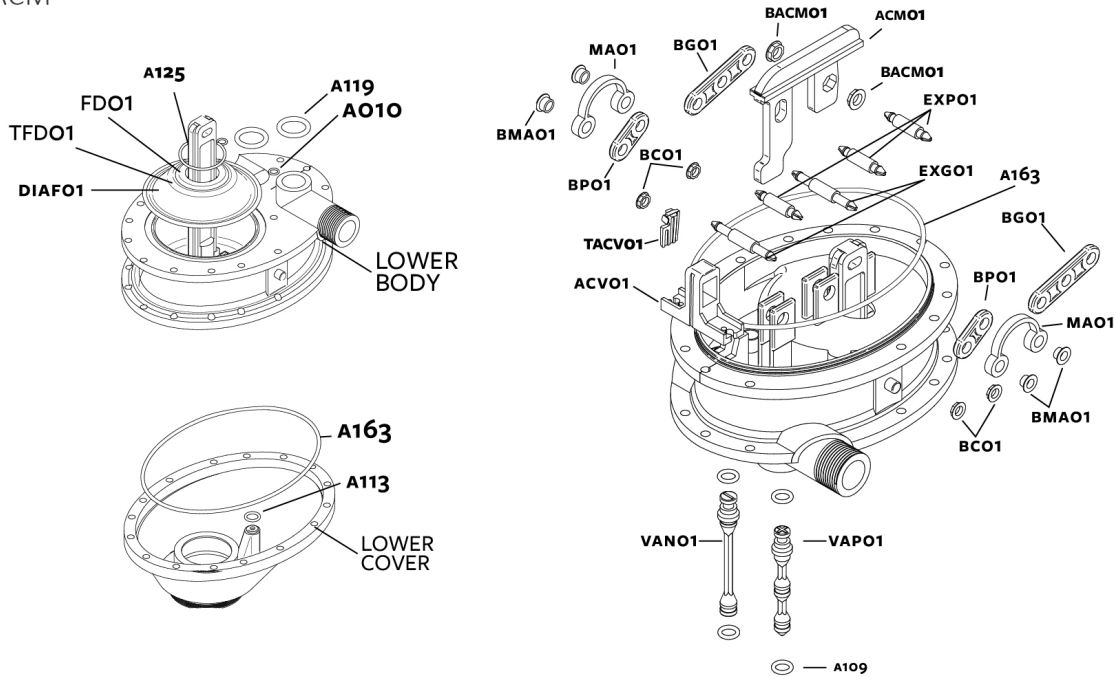

COD.	QTY	DESCRIPTION
ACM01	01	DOSATAK Mechanical Drive
A163	02	DOSATAK Nitrile Seal Ring Upper and Lower Cover
A010	02	Nitrile Sealing Ring of Internal Screws
A119	02	Nitrile Sealing Ring DOSATAK Bodies Connectors
A113	01	DOSATAK Viton Injector Sealing Ring Between Lower Cover and Body
VAN01	01	DOSATAK Negative Needle Valve
VAP01	01	DOSATAK Positive Needle Valve
A109	04	Black Viton Sealing Ring Valves Needle DOSATAK
EXP01	03	Small Shaft Motor Assembly DOSATAK
EXG01	02	Big Shaft Motor Assembly DOSATAK
BG01	02	Big Bar Motor Assembly DOSATAK
BP01	02	Small Bar Motor Set DOSATAK
MA01	02	DOSATAK Motor Assembly Arc Spring
BMA01	04	DOSATAK Arc Spring Bushing
BC01	04	DOSATAK Motor Body Bushing
BACM01	02	DOSATAK Mechanical Actuator Bushing
ACV01	01	DOSATAK Valves Driver
TACV01	01	DOSATAK Valve Actuator Lock
DIAFO1	01	DOSATAK Rubber diaphragm
TFD01	01	DOSATAK Diaphragm flange lock
FD01	01	DOSATAK Diaphragm flange with thread
A125	01	DOSATAK Diaphragm Rod Nitrile Seal Ring
GSD01	03	Silicone Grease for Sealing Ring Lubrication

